

INSTALLATION INSTRUCTIONS: LEWISTON ADDRESS PLATES



Figure 1

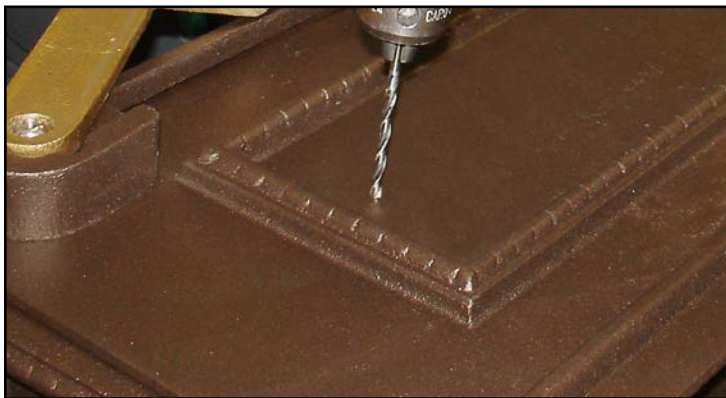


Figure 2



Figure 3



Figure 4

READ ALL INSTRUCTIONS FIRST BEFORE STARTING INSTALLATION.

1. Lay an address plate in one of the mailbox's recessed "framed" areas. Mark the address plate screw-hole positions on the mailbox with a pencil (Fig. 1).
2. Remove the address plate. Use a 1/8" drill bit to drill holes into the mailbox according to the marks you made (Fig. 2).
3. Place the address plate back onto the mailbox and place a screw into each hole (Fig. 3).
4. Open the mailbox door and add acorn nuts to the back of the screws (Fig. 4). Tighten the screws firmly to secure the address plate to the mailbox.
5. Repeat steps for additional address plates.

Enjoy!



Front Plate



Side Plate

QualArc
11300 Trade Center Dr., Ste. A
Rancho Cordova, CA 95742
916-273-1576
Fax 916-635-0228
www.qualarc.com

